

## PCE-FC25

10 Hz to 2.6 GHz Frequency counter with telescopic RF pickup antenna


This frequency counter possesses a microprocessor for frequency, period, resolution, data hold, relative measurement and memory (maximum, minimum and average values) functions. Its low consumption and its large display allow you to work comfortably under unfavourable light conditions. The telescopic antenna, which is included in the delivery, makes it possible to measure (only frequency) without cables, a mobile or stationary transmitter.

- Telescoping RF pickup antenna with BNC connector
- Measurement range of 5 to 30 cm
- Auto shut-off
- It can be connected to a 9 V Dc adaptor
- ISO certificate (optional)



### Technical specifications

Measurement range	2500 MHz: 50 MHz ... 2500 MHz (max. 2600 MHz) 500 MHz: 10 MHz ... 500 MHz 10 MHz: 10 Hz ... 10 MHz
Sensitivity	2500 MHz: <50 mVeff 500 MHz: <50 mVeff 10 MHz: <50 mVeff
Period range	10 Hz to 10 MHz
Sensitivity	<50 mVeff
Time base	4.194 MHz Quartz Crystal
Power	4 batteries (1.5 V)
Dimensions	80 x 173 x 35 mm
Weight	340 g

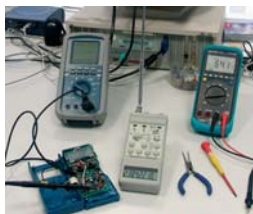

### Contents

PCE-FC25 frequency counter, telescopic antenna, control cables, batteries and user's manual

Model No.	Description
PCE-FC25	Frequency counter

### Optional accessories

CAL-PCE-FC	ISO certificate
------------	-----------------

## PCE-FC27

10 Hz to 2.7 GHz Frequency counter with RS-232 interface

We offer you a bench type frequency counter with 8 digit display, a measurement range from 10 Hz to 2.7 GHz and a time base of 10 MHz with a quartz oscillator controlled by the temperature. Frequency counter connection guarantees great measurement results with high accuracy and high sensitivity. Its ease of use and its versatility makes it very attractive for scientific, laboratory technicians, communications technicians and engineers. All the functions are selected through the keypad.

- RS-232 serial interface (protocol included)
- Self-testing function
- Minimum, maximum and average data storage
- Input for external frequency
- 8 digit LCD
- Relative period measurements
- ISO calibration certificate (optional)



### Technical specifications

Ranges	10 Hz to 10 MHz 10 MHz to 500 MHz 100 MHz to 2700 MHz
Sensitivity	10 MHz: 30 mVeff 500 MHz: 50 mVeff 2.7 GHz: 50 mVeff
Period ranges	10 Hz to 10 MHz
Sensitivity	10 Hz a 9 MHz: 15 mVeff
Time base	16.777216 MHz
Time base stability / temperature	±1.5 PPM (+10 to +30 °C)
Frequency accuracy	±(2 PPM +1 dgt); +23.5 °C
Input connector	10 MHz + period: 15 Veff 500 MHz: 4 Veff 2.7 GHz: 4 Veff
Power	6 AA batteries or a 9 V adaptor
Dimensions	280 x 210 x 90 mm
Weight	1200 g

### Contents

PCE-FC27 frequency counter, 1 test cable kit, 6 batteries and user's manual

Model No.	Description
PCE-FC27	Frequency counter

### Optional accessories

SOFT-LUT	Software and RS-232 cable
CAL-PCE-FC	ISO certificate

## PCE-IT55

Insulation tester with three test leads

This insulation meter determines the insulation resistance up to 2000 MΩ (for 250, 500 and 1000 V auxiliary voltages). It also offers the possibility to measure continuous and alternating currents up to 750 V / 1000 V, as well as resistance up to 2 kΩ. It has a continuity check function and a beep tone for insulation measurements. Measurement values can be adjusted by pressing a key. This unit meets DIN 57 411 part 1 / VDE 0411 part 1 standards, which are measurement protection for electronic meters (IEC1010-1) and DIN VDE 0413 (insulation meters).

- Meets IEC1010-1, CAT III 1000 V
- Large dual display with backlight
- Short-term and long-term measurements with "LOCK"
- Over range and battery life indicators
- Beep tone for insulation measurements
- Auto shut-off
- ISO calibration certificate (optional)



### Technical specifications

Ranges	insulation: 0 to 200 MΩ / 200 to 2000 MΩ ACV: 0 ... 750 V DCV: 0 ... 1000 V ohms: 0 to 200 Ω / 200 to 2000 Ω
Resolution	insulation: 100 kΩ to 1 MΩ ACV: 1 V DCV: 1 V ohms: 0,1 Ω / 1 Ω
Accuracy	insulation: ±3.5 % ±5 dgts ACV: ±1.2 % ±10 dgts DCV: ±0.8 % ±3 dgts ohms: ±1.0 % ±2 dgts
Test voltage	250 V - 200 MΩ 500 V - 200 MΩ 1000 V - 2000 MΩ
Continuity test	beep: <40 Ω, test current 200 mA
Power	6 AA batteries
Operating conditions	0 to +40 °C / <80 % r.h.
Dimensions	200 x 92 x 50 mm
Weight	700 g
Approvals	IEC10101, CAT III 1000 V

### Contents

PCE-IT55 insulation tester, cables, test leads, jaw alligator clips, batteries, carrying case and user's manual

Model No.	Description
PCE-IT55	Insulation tester

### Optional accessories

CAL-5500	ISO certificate
----------	-----------------